

KILN 120 LH FOR CERAMIC

TECNICAL DATA AND WARRANTY

Inside	Vol.	W	L	H	Max, temp.	kW	Volt	A
Dim.	120 L	40 cm	50 cm	59 cm	1.300°C	9,6	400	16

Heaters: Kanthal AF

Thermocouple: Pt-Rh-Pt, tip S

Fuse in regulation: 0, 3 A

INSTRUCTION FOR MOUNTING:

Kiln is tree phase (400 V), with regulation and safety by contactor.
We recommend additional ground to metal case.

INSTRUCTION FOR USE:

First firing has very bad smell and smoke. We recommend making first firing in open or good ventilated place.

WARNING:

Around the kiln must be clean without flammable materials as paper, plastic, etc...

Cooling holes must be about 30 cm distance from walls.

If you open the kiln in higher temperature you have to use hands and eye protection. It is better to put no synthetic clothes.

When you open electric cover, please disconnect electricity.

WARRANTY: 3 years, except mechanical damages.

Ljubljana,.....